



IMAGINE IT

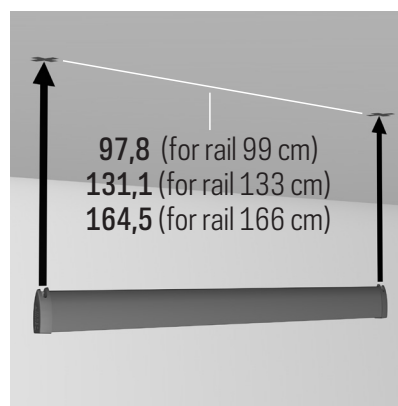


magazines / smart pockets


! CUT WIRE AFTER RAIL INSTALLATION IS COMPLETELY FINISHED

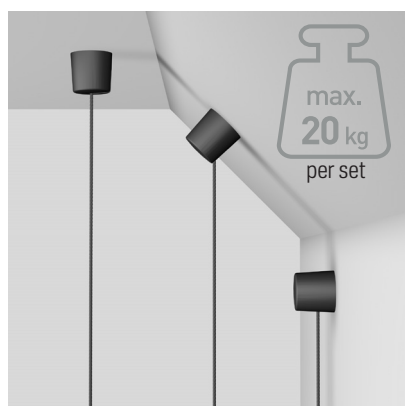


1

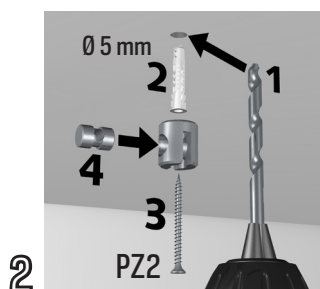


2

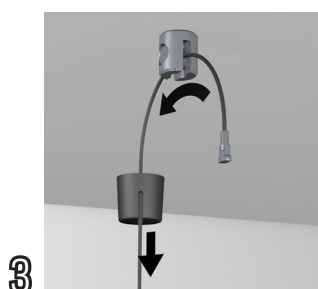


3

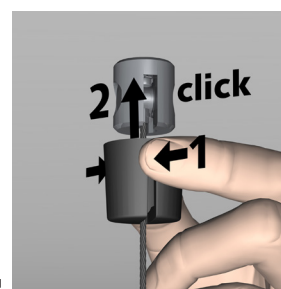


4

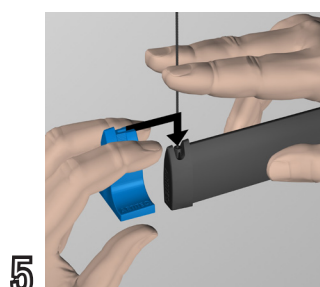


5

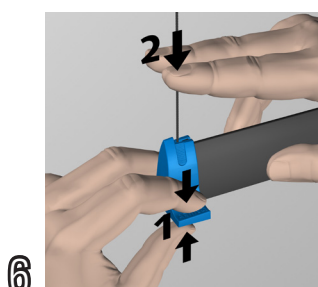


6

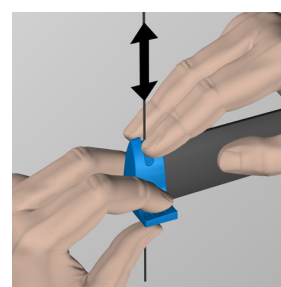


7

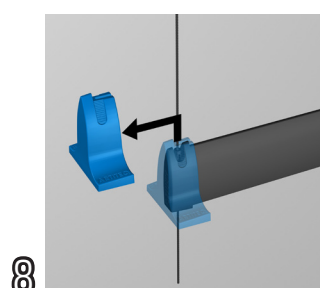

8

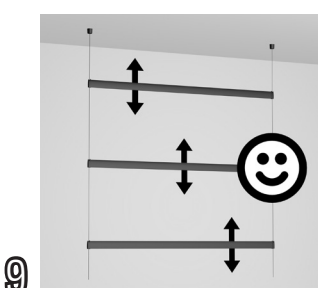

9

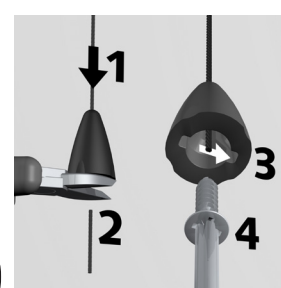

10

installation movie:



FLEXIBLE
SAFE
STRONG




WWW.ARTITEQ.COM

IMAGINE IT




magazines / smart pockets


! CUT WIRE AFTER RAIL INSTALLATION IS COMPLETELY FINISHED

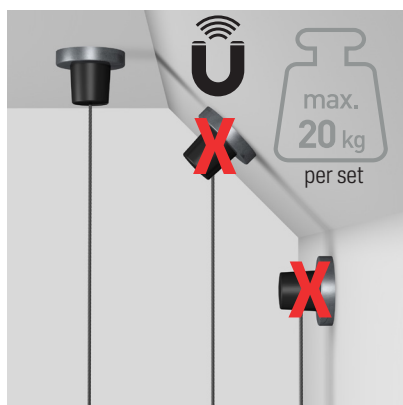


1

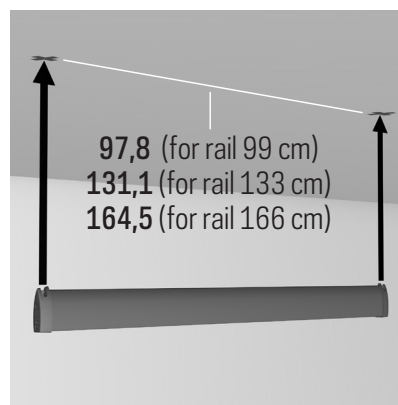


2

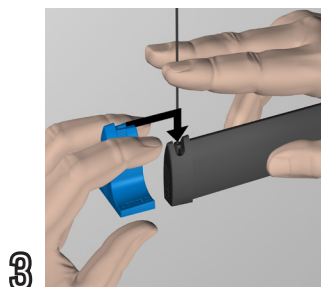


3

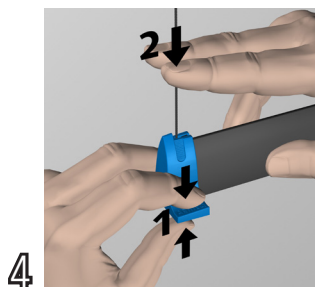


4

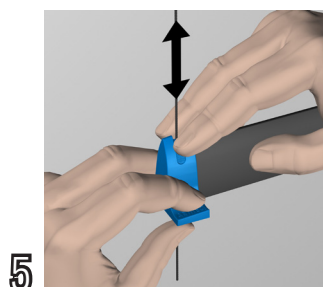


5

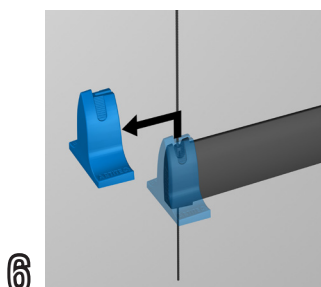

6

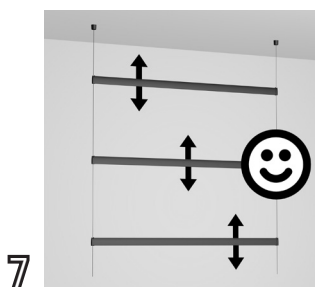


7

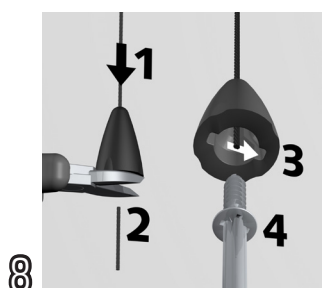

8

installation movie:

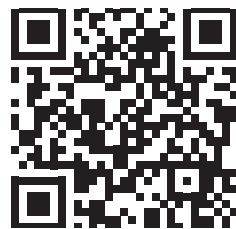

FLEXIBLE
SAFE
STRONG




WWW.ARTITEQ.COM


IMAGINE IT




magazines / smart pockets

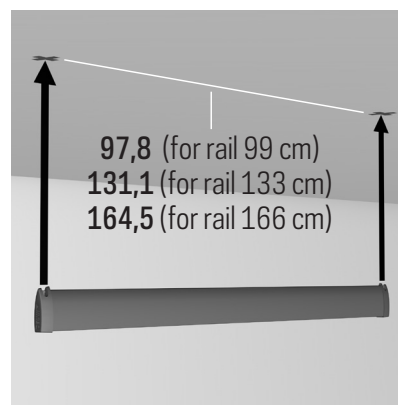


1

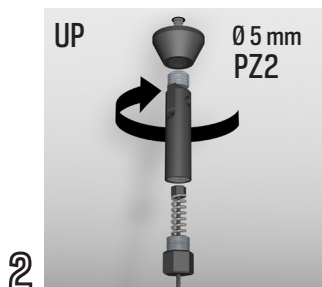


2

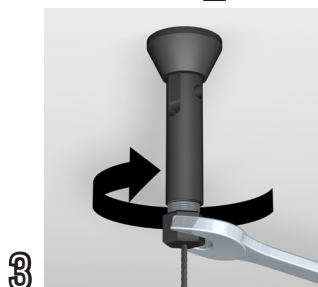


3

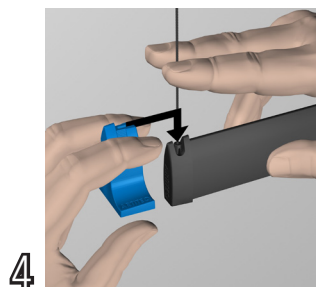


4

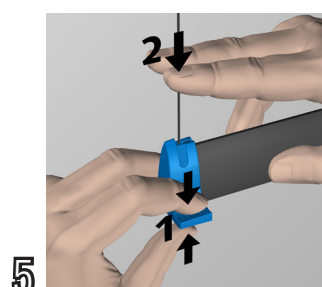


5

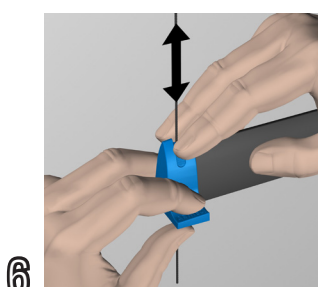


6

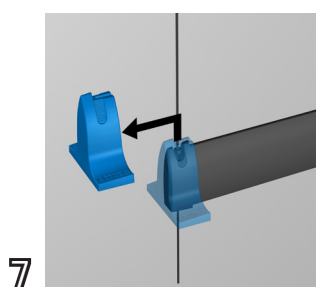

7


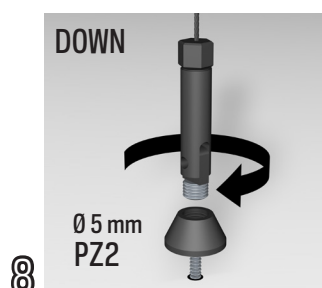


8

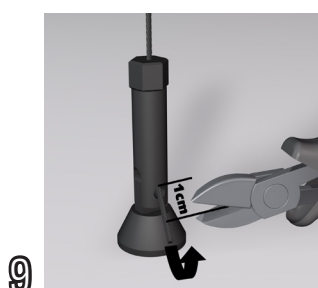

9

installation movie:

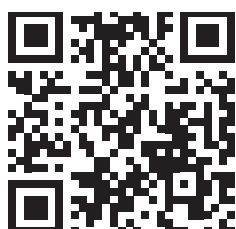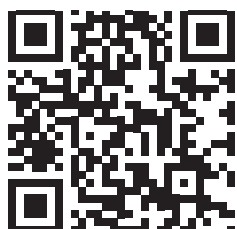

FLEXIBLE
SAFE
STRONG





WWW.ARTITEQ.COM

SMART POCKETS



FOR IMAGINE IT



IN:

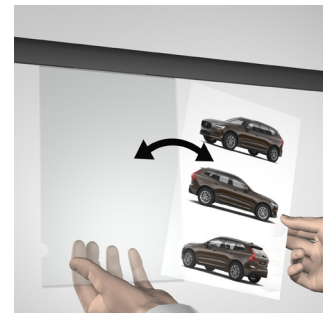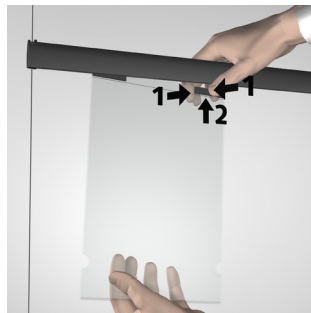

OUT:

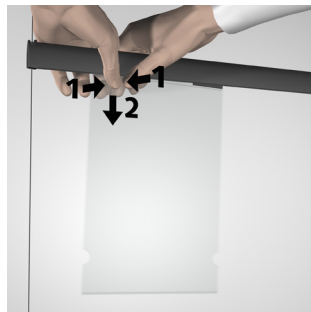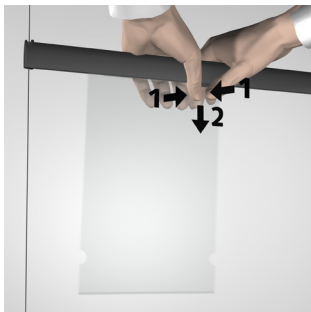

installation movie:



FLEXIBLE
SAFE
STRONG